



The top of the banner is held in place by inserting the hard plastic knob into the guide. Slightly tilt the hard plastic knob (shown above) and slot it in the guide (shown below).

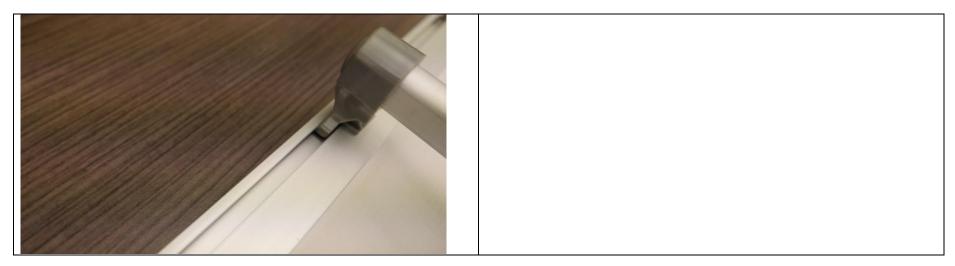



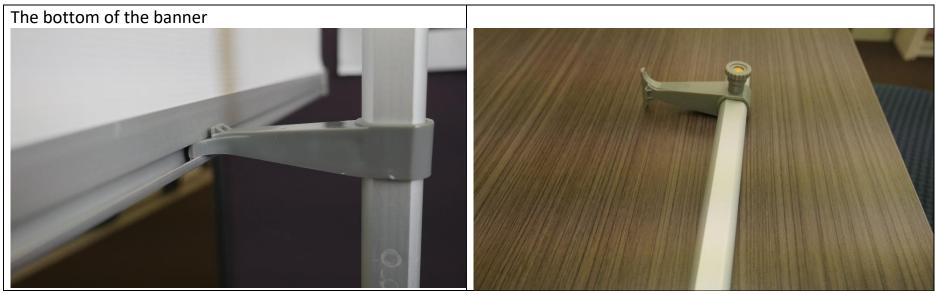

The bottom of the banner is held in place as shown above. Once again tilt the plastic knob slightly and insert it into the guide at the bottom of the banner.



